



## Operating Instructions & Parts Manual

# Hydraulic Transmission Jacks

### Model Number

41100

42000


43000

### Capacity


1100-lb.

2000-lb.


3000-lb.

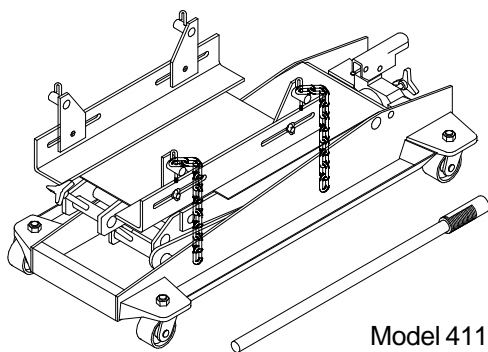

Model 41100

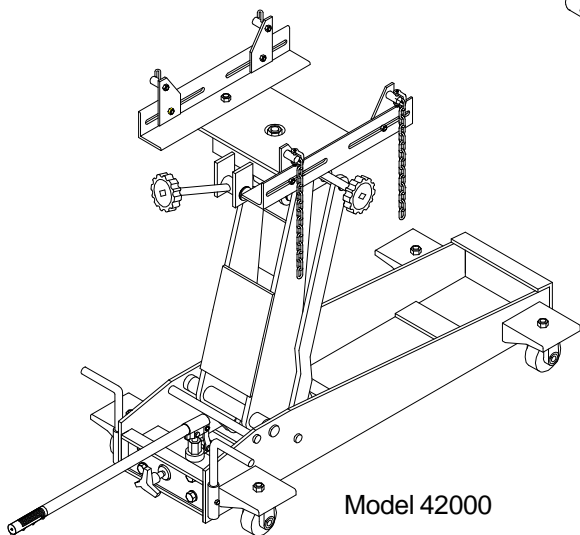

Model 42000

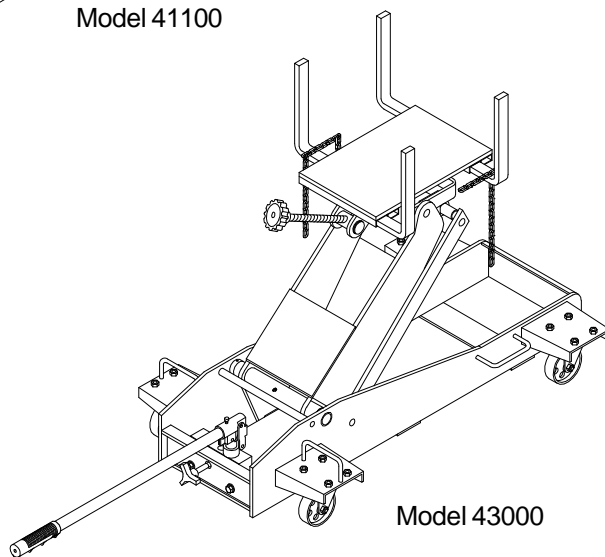

Model 43000

SFA Companies © 2005  
10939 N. Pomona Avenue  
Kansas City, MO 64153

**Save these instructions.** For your safety, read, understand, and follow the information provided with and on this jack. The owner and operator of this equipment shall have an understanding of this jack and safe operating procedures before attempting to use. The owner and operator shall be aware that use and repair of this product may require special skills and knowledge. Instructions and safety information shall be conveyed in the operator's native language before use of this jack is authorized. If any doubt exists as to the safe and proper use of this jack, remove from service immediately. **Inspect before each use.** Do not use if broken, bent, cracked or damaged parts are noted. Any jack that appears damaged in any way, or operates abnormally shall be removed from service immediately. If the jack has been or suspected to have been subjected to a shock load (a load dropped suddenly, unexpectedly upon it), immediately discontinue use until jack has been checked by an Omega authorized service center. It is recommended that an annual inspection be done by qualified personnel. Labels and Operator's Manuals are available from manufacturer (see Replacement Parts, pages 4 thru 7).

## PRODUCT DESCRIPTION

Omega Hydraulic Transmission Jacks are designed to be used as an aid in the removal and installation of automotive and light truck transmissions, transfer cases and transaxles. These jacks are for use under portable lift equipment, where vehicle must be supported by appropriately rated jack stands.

## SPECIFICATIONS

Model	Capacity	Min. Height	Max. Height	Saddle Base	Extended Saddle Area	Base Size
41100	1100 lb.	8 1/2"	24 3/4"	12 5/8" x 7 7/8"	17" x 9 3/8"	31 1/8" x 15"
42000	2000 lb.	7 7/8"	33 1/2"	14 1/4" x 8"	17" x 15 3/4"	39 3/8" x 19 1/8"
43000	3000 lb.	7 7/8"	37 1/4"	15 1/2" x 13 1/4"	24 7/8" x 19"	46 3/4" x 25 5/8"

## BEFORE USE

1. Inspect jack before each use. Do not use if bent, broken or cracked components are noted. Ensure that casters move freely. Check for and tighten any loose assemblies.
2. Verify that the product and the application are compatible, if in doubt call Omega Technical Service (888)332-6419.
3. Remove oil filler plug/screw prior to initial use to confirm oil level is at or just above the inner cylinder as seen from the reservoir, fill as needed and reinstall oil filler plug/screw.

## WARNING

- Study, understand, and follow all printed materials provided with/on this product before use.
- Do not exceed rated capacity.
- Use only on hard, level surfaces capable of supporting rated capacity loads.
- Use of this jack is limited to the removal, installation and transportation of transmissions, transfer cases and transaxles. Do not use a transmission jack to tilt or support a vehicle.
- Ensure the center gravity of load is centered on the saddle.
- For your safety, do not exceed 10° tilt angle of the saddle assembly in all directions.
- Adequately support the vehicle before starting repairs.
- Use only chains and slings provided.
- If loaded jack must be moved, make sure that the load is secured, stable and in lowest position.
- This is a lifting and lowering device only.
- Transfer load immediately to appropriate support device for service or repair.
- Shock loads may cause the sudden loss of load and/ or cause the jack to tip or flip over violently, bend or break.
- No alterations shall be made on this product
- Failure to heed these markings may result in personal injury and/or property damage.

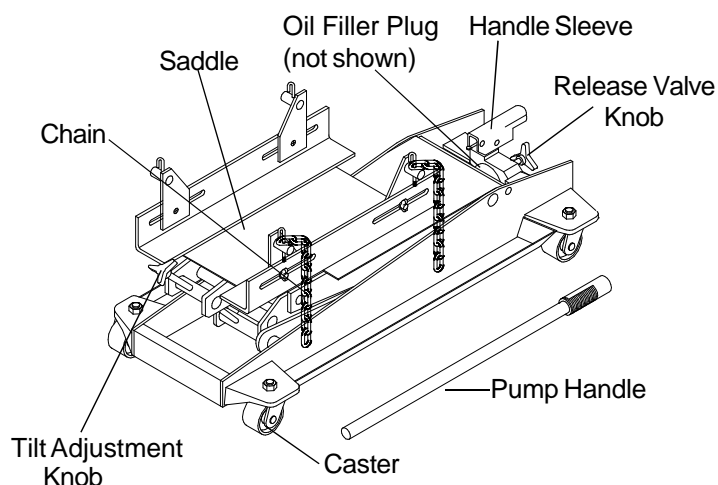


Figure 1 - Model 41100 Components

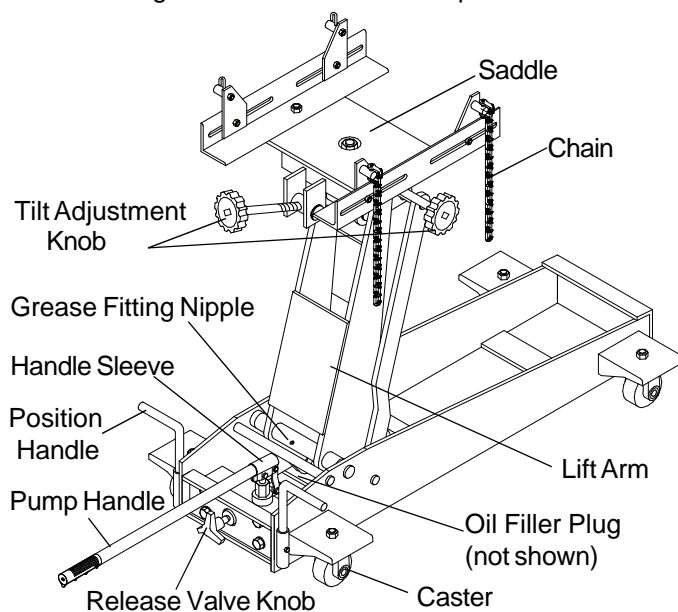


Figure 2 - Model 42000 Components

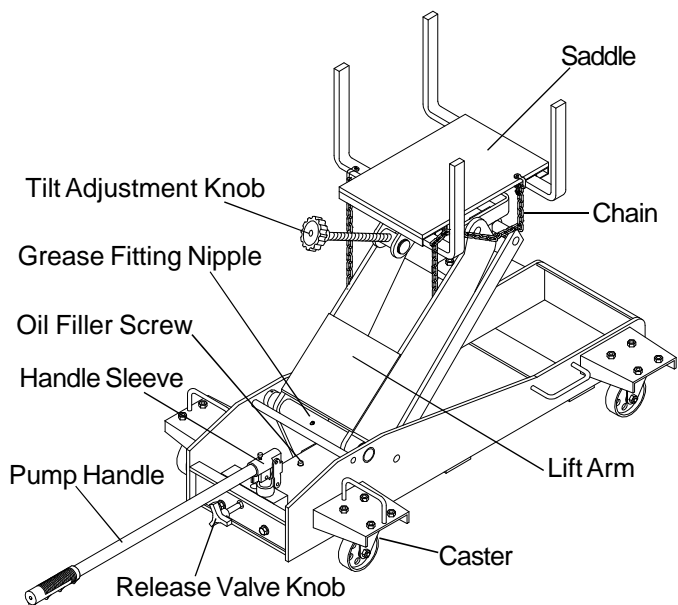


Figure 3 - Model 43000 Components

## ASSEMBLY

Little or no assembly is required. Refer to Figures in the manual for details in understanding the assembly and the components of your product.

## OPERATION


### Raise saddle:

1. Locate and close release valve by turning knob clockwise firmly, then pump the pump handle until the load is contacted.
2. Follow vehicle manufacturers recommended procedures for removing the load as outlined in vehicle service manual or repair guide.
3. Secure load with provided chains. Ensure load's center of gravity is centered on the saddle and load is stable before moving jack.

### Lower saddle:

**Caution!** Be sure all tools and personnel are clear before lowering load. Dynamic shock loads are created by quickly opening and closing the release valve as the load is being lowered. The resulting overload may cause hydraulic system failure.

1. Slowly, gently turn the release valve knob counterclockwise, **never more than 1/2 full turn** until the load is completely lowered.
2. Immediately transfer the load to an appropriate repair fixture.

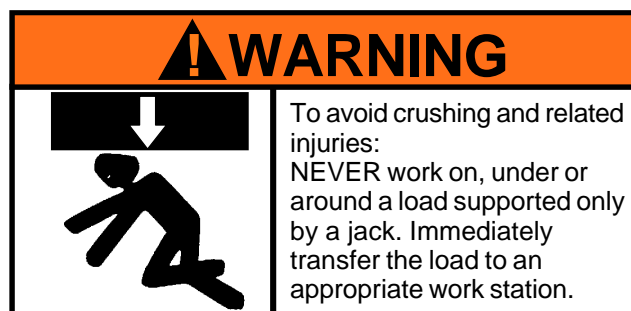

## MAINTENANCE

**Important:** Use only a good grade hydraulic jack oil. Avoid mixing different types of fluid and **NEVER** use brake fluid, turbine oil, transmission fluid, motor oil or glycerin. Improper fluid can cause premature failure of the jack and the potential for sudden and immediate loss of load. We recommend Mobil DTE 13M or equivalent. Reinstall oil filler plug/ screw.

### Adding oil

1. With saddle fully lowered, set jack in its upright, level position. Remove oil filler plug/ screw.
2. Fill until oil is level with the oil filler hole, reinstall oil filler plug/ screw.

### Changing oil

For best performance and longest life, replace the complete fluid supply at least once a year.

1. With saddle fully lowered, set jack in its upright, level position. Remove the oil filler plug/ screw.
2. Lay the jack on its side and drain the fluid into a suitable container.

**Note:** Dispose of hydraulic fluid in accordance with local regulations.

3. Set jack in its level upright position.
4. Fill with good quality jack oil.

### Lubrication

A periodic coating of light lubricating oil to pivot points, axles and hinges will help to prevent rust and assure that wheels, casters and pump assemblies move freely.

### Cleaning

Periodically check the ram for signs of rust or corrosion. Clean as needed and wipe with an oily cloth.

**Note:** Never use sandpaper or abrasive material on these surfaces!

### Storage

When not in use, store the jack with pump piston and saddle in lowest position.

## TROUBLESHOOTING

Symptom	Possible Causes	Corrective Action
Jack will not lift load	<ul style="list-style-type: none"><li>• Release valve not tightly closed</li><li>• Overload condition</li></ul>	<ul style="list-style-type: none"><li>• Ensure release valve tightly closed</li><li>• Remedy overload condition</li></ul>
Jack bleeds off after lift	<ul style="list-style-type: none"><li>• Release valve not tightly closed</li><li>• Overload condition</li><li>• Hydraulic unit malfunction</li></ul>	<ul style="list-style-type: none"><li>• Ensure release valve tightly closed</li><li>• Remedy overload condition</li><li>• Contact Omega Tech. Service</li></ul>
Jack will not lower after unloading	<ul style="list-style-type: none"><li>• Reservoir overfilled</li><li>• Linkages binding</li></ul>	<ul style="list-style-type: none"><li>• Drain fluid to proper level</li><li>• Clean and lubricate moving parts</li></ul>
Poor lift performance	<ul style="list-style-type: none"><li>• Fluid level low</li><li>• Air trapped in system</li></ul>	<ul style="list-style-type: none"><li>• Ensure proper fluid level</li><li>• With ram fully retracted, remove oil filler plug to let pressurized air escape, then reinstall oil filler plug</li></ul>
Will not lift to full extension	<ul style="list-style-type: none"><li>• Fluid level low</li></ul>	<ul style="list-style-type: none"><li>• Ensure proper fluid level</li></ul>

## REPLACEMENT PARTS

**Available Parts:** Please refer to the Parts drawings on pages 5 thru 7 when ordering parts. Not all components of the jack are replacement items, but are illustrated as a convenient reference of location and position in the assembly sequence. When ordering parts, give part no. and description. Call or write for current pricing: SFA Companies. 10939 N. Pomona Ave. Kansas City, MO 64153, U.S.A. Tel:(888)332-6419 Fax:(816)891-6599  
E-Mail:sales@omegalift.com Omega Website: <http://www.omegalift.com>

# **Model No. 41100**

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty</u>
1	505-9-0092-207	Oil Filler Plug	1
2	450-1-100-108	Hydraulic Unit	1
3	451-6-6200-108	Chain	2
4	450-3-5000-100	Saddle Assembly	1
5	450-4-5300-108	Angle Bar	2
6	450-3-5700-108	Tilt Screw	1
7	450-3-5600-205	Saddle Holder	1
8	G89-0-9003-7002	Caster Assembly	4
9	450-6-4409-107	Hydraulic Unit Pivot Pin	2
10	G52-3-9903-104	Handle	1
11	450-4-1700-104	Release Valve Assembly	1
-	450-3-9901-107	Repair Kit for Hydraulic Unit	-
-	41100-L0	Product Label	-
-	41100-M0	Manual	-

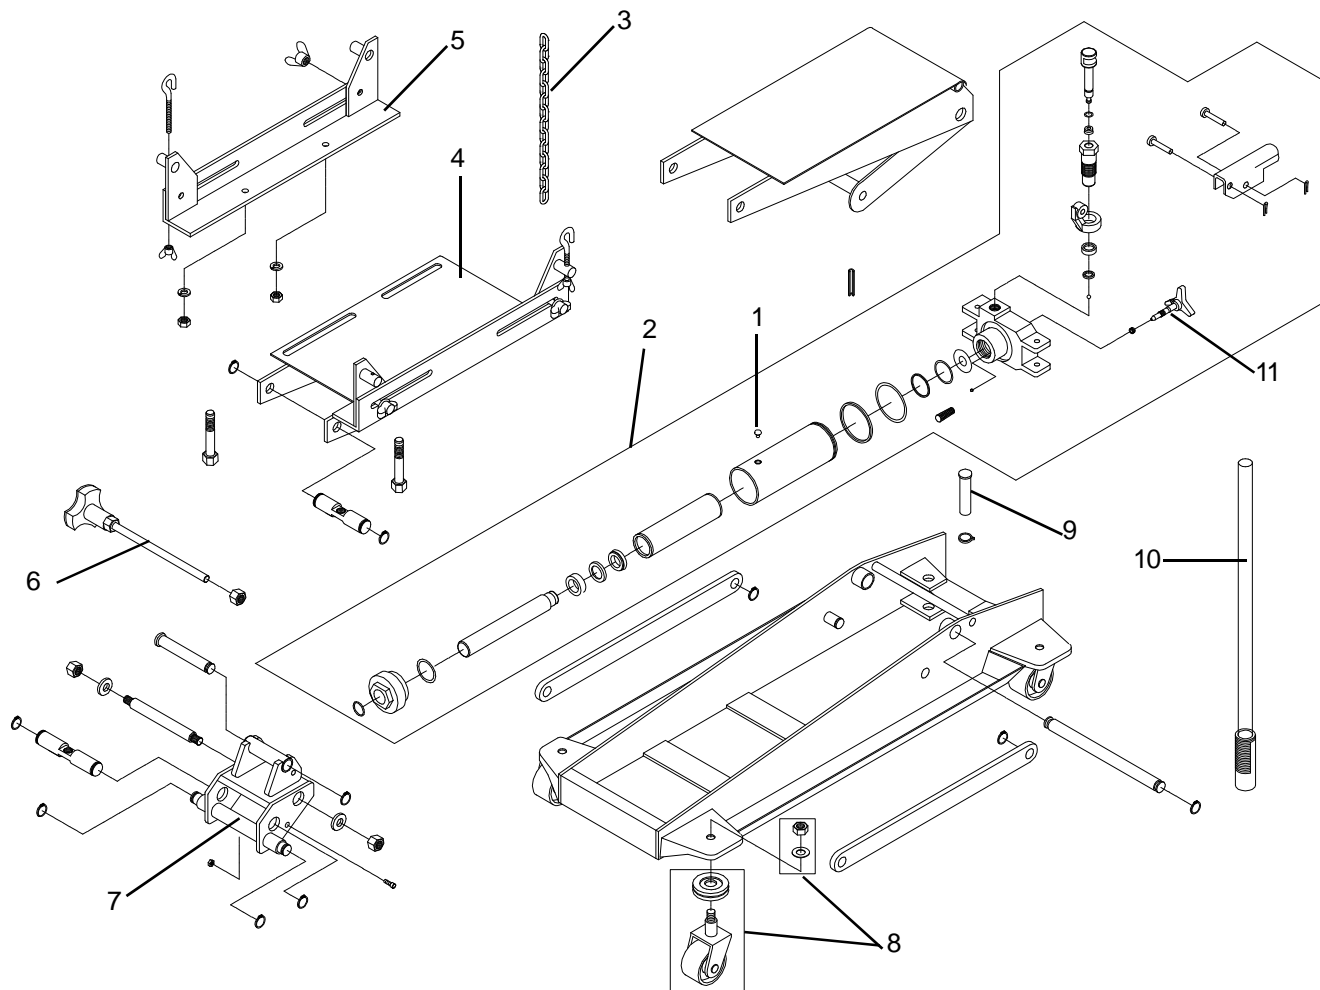


Figure 4 - Replacement Parts for Model 41100

# **Model No. 42000**

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty</u>
1	505-9-0092-207	Oil Filler Plug	1
2	G52-1-1000-100	Hydraulic Unit	1
3	G36-6-7000-102	Chain	2
4	G52-3-4204-103	Saddle Assembly	1
5	G52-6-4207-107	Angle Bar	2
6	G52-6-4402-105	Tilt Screw	1
7	G52-6-4401-103	Tilt Screw	1
8	G52-6-1709-106	Tilt Knob	2
9	G52-3-4300-109	Saddle Holder	1
10	G52-4-5200-106	Caster Assembly	4
11	G52-3-9903-104	Handle	1
12	G52-6-1701-100	Release Valve	1
13	G34-6-1709-104	Release Valve Knob	1
14	G52-6-3004-108	Position Handle	1
15	653-1-0127-409	Hex. Bolt	6
16	653-1-0159-008	Hex. Bolt	1
-	G52-3-9901-100	Repair Kit for Hydraulic Unit	-
-	42000-LO	Product Label	-
-	41100-M0	Manual	-

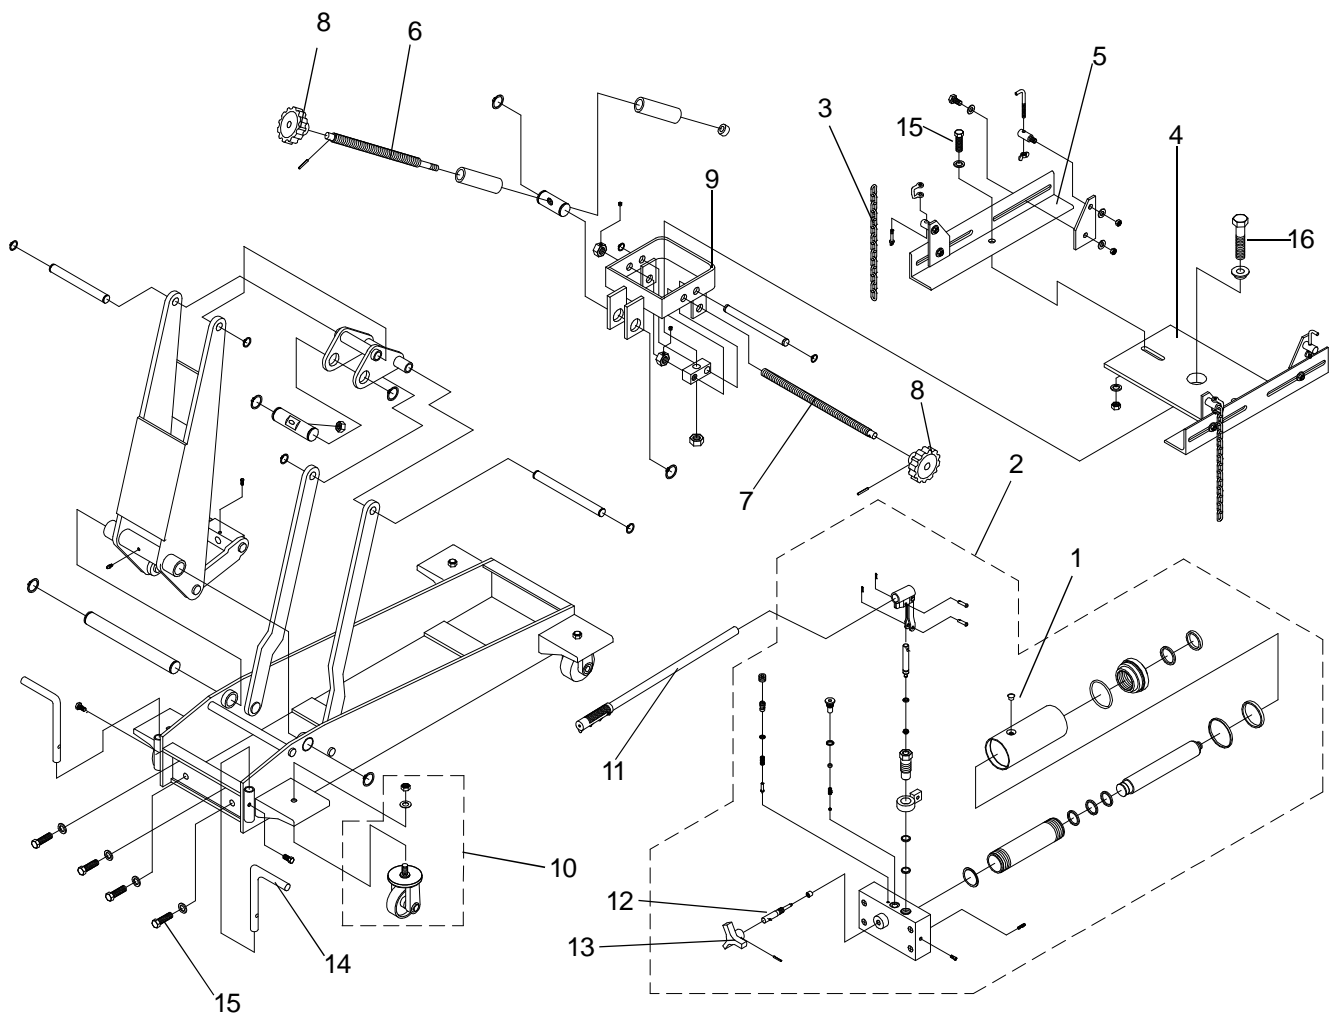


Figure 5 - Replacement Parts for Model 42000

# **Model No. 43000**

<u>Item</u>	<u>Part#</u>	<u>Description</u>	<u>Qty</u>
1	324-4-1900-208	Oil Filler Screw	1
2	G62-1-1000-108	Hydraulic Unit	1
3	G36-6-7000-102	Chain	2
4	G52-4-4102-101	Hook & Chain	4
5	G62-3-4200-101	Saddle Plate	1
6	G62-6-4302-109	Support Bar	4
7	G62-6-4501-105	Tilt Screw	1
8	G52-6-1709-106	Tilt Knob	1
9	G62-3-4203-109	Saddle Holder	1
10	G38-4-5200-102	Caster Assembly	4
11	G46-6-2101-101	Handle	1
12	G62-6-1701-108	Release Valve	1
13	G34-6-1709-104	Release Valve Knob	1
14	653-1-0127-409	Hex. Bolt	6
-	G62-3-9901-108	Repair Kit for Hydraulic Unit	-
-	43000-L0	Product Label	-
-	41100-M0	Manual	-

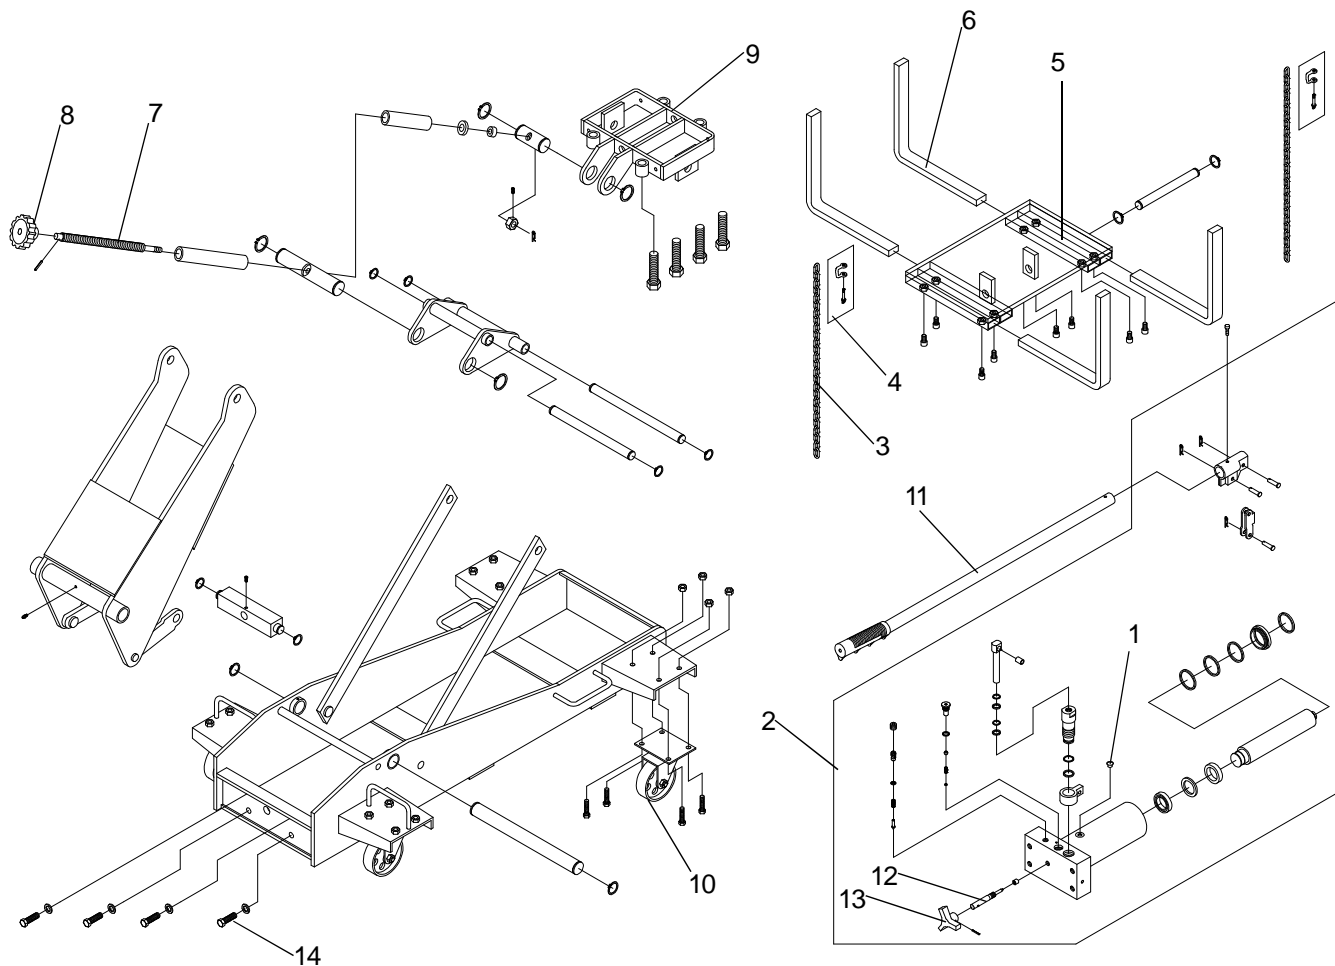


Figure 6 - Replacement Parts for Model 43000

## ONE YEAR LIMITED WARRANTY

For a period of one (1) year from date of purchase, **SFA Companies** will repair or replace, at its option, without charge, any of its products which fails due to a defect in material or workmanship under normal usage. This limited warranty is a consumer's exclusive remedy.

Performance of any obligation under this warranty may be obtained by returning the warranted product, freight prepaid, to **SFA Companies** Warranty Service Department, 10939 N. Pomona Ave., Kansas City, MO 64153.

Except where such limitations and exclusions are specifically prohibited by applicable law, (1) THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS AS DESCRIBED ABOVE. (2) **SFA Companies** SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGE OR LOSS WHATSOEVER. (3) ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO ONE YEAR, OTHERWISE THE REPAIR, REPLACEMENT OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. (4) ANY MODIFICATION, ALTERATION, ABUSE, UNAUTHORIZED SERVICE OR ORNAMENTAL DESIGN VOIDS THIS WARRANTY AND IS NOT COVERED BY THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.